


Time Change on Avaya Servers

Open your web browser and browse to the address of your system:

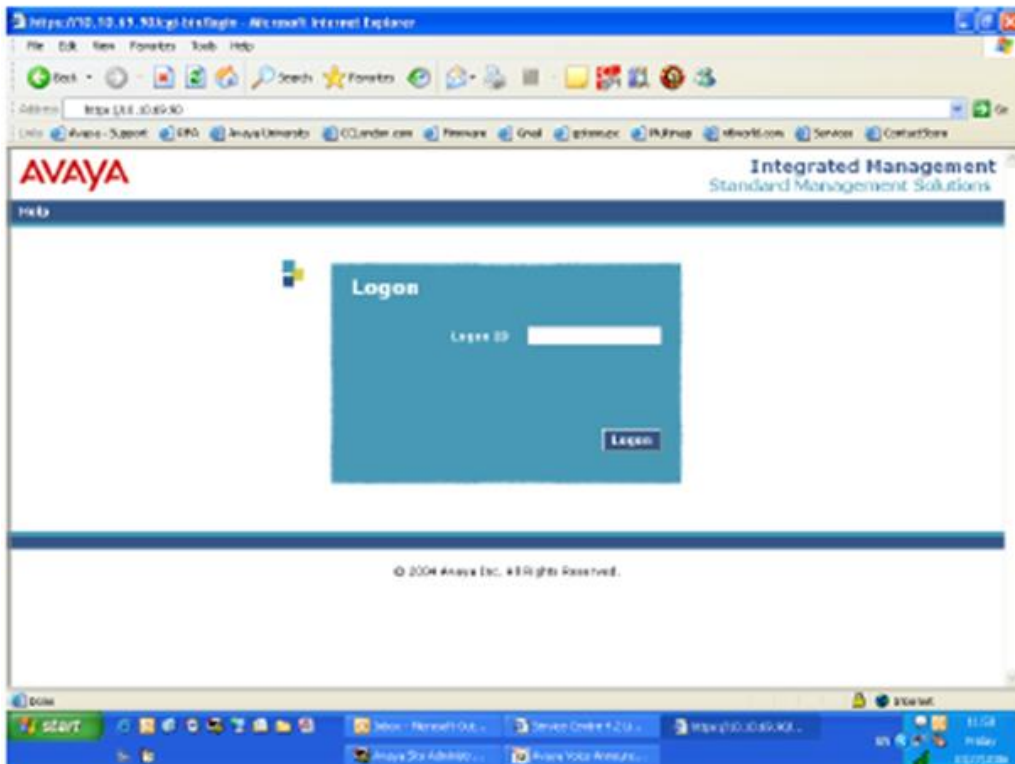

Login using your login and password (default login cust, password custpw1)


Then click on "Launch Maintenance Web Interface"




This should open up a new window, on the left under the "Server" section, click on "Server Date/Time"



Fill in the date and time (date is in American format) and click submit

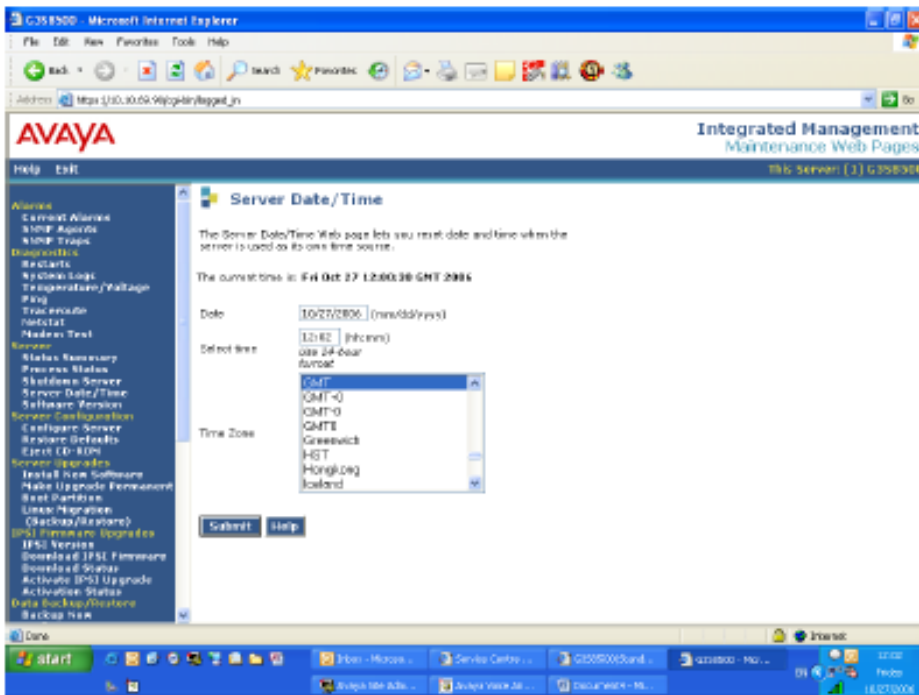

Now to log out, click on "Exit", and then "Exit" again

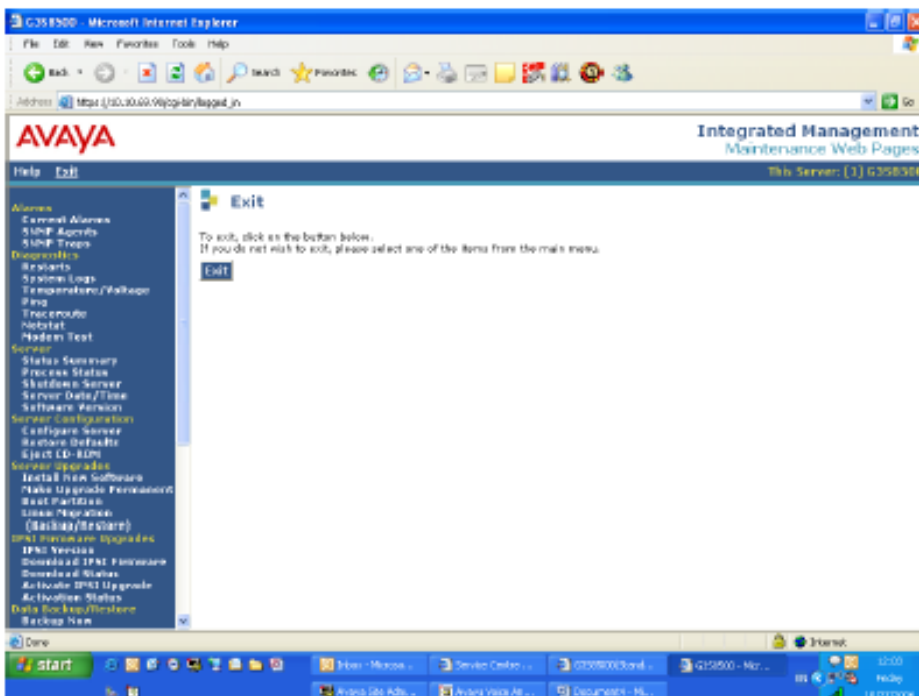

Then click "Logoff", and then "Logoff" again

